

DFWL

"DFWL": MULTIFUNCTION WEIGHT INDICATOR



High performance and reliability at a competitive price. The DFWL digital weight indicator is versatile and easy to programme and use. The wide range of available functions and interfaces, make it suitable for many different kinds of industrial and commercial weighing applications. Suitable for pallet truck scales, fork lifts and automotive. Standard fitted with a support bracket with adjustable inclination, for use on the table, column, or wall. CE-M approvable (OIML R-76 / EN 45501).

The best solution
for advanced industrial
applications

MAIN FEATURES:

- 5-key functional waterproof keypad.
- Backlit 25mm LCD display with 6 high contrast digits with icons for showing the active functions.
- Easy to clean ABS IP54 case, resistant to harsh and corrosive environments.
- Suitable for use on the table, column, or wall.
- Fitted with fixing bracket with adjustable inclination.
- A/D 24 bit, 4 channel converter, max. 200 conv./sec. autoselect, and up to 8 signal linearisation points.
- Up to 10.000e or multirange 3 x 3000e @ 0,3 μ V/d in CE-M approved versions for legal for trade use.
- Up to 1.000.000 displayable divisions with internal resolution up to 3.000.000 points.
- Connection with up to 8 load cells with input resistance equal to 350 Ohm or up to 16 cells of 700 Ohm each.
- Digital calibration and Set-Up from keypad or from PC through DINITOOLS.
- Power supply from 5 to 12Vdc.
- Supplied as standard with 4 AA batteries extractable drawer (batteries not included), and 12V external power adapter (if connected it excludes the battery supply).

MAIN CERTIFICATIONS

- EC Type Approval (EN45501)
- OIML R76

SELECTABLE FUNCTIONS:

- **KEYBOARD:**
Zeroing, Automatic tare, Presetable tare, printing and/or data transmission, selectable function command, on/off switching.
- **SELECTABLE FUNCTIONS:**
 - High Resolution Weighing x 10.
 - Net/Gross or lb/kg conversion.
 - Accumulation.
 - Formula weighing.
 - +/- Checkweighing.
 - Percentage weighing.
 - Approved transmission of the weight to PC/PLC or data recording on MMC/USB (with Alibi memory ALMEM option).
 - Counting(Max. resolution of 1.500.000 divisions).
 - In/Out Truck weighing.
 - Hold and Peak.


MASTER/REPEATER OPTION

- Specific programme (MSTSLV code) for use of the indicator as a universal weight repeater or as a multi-scale repeater (MASTER) in combination with DFW/DGT/MCW.

FUNCTIONING MODES:

- Multi-scale repeater (MASTER)
function which allows to repeat up to 32 independent scales, with the possibility of managing their functions, or displaying and printing the sum of the weights of all the scales.
- UNIVERSAL weight repeater
function which allows to repeat the weight of any scales, through the configuration of the input string.
- [Click to learn more.](#)

DETAIL 1

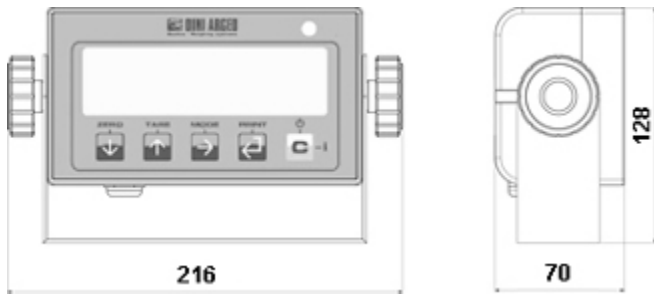

DFWL: dimensions in mm.



www.diniargeo.com



“YOUR WORLDWIDE PARTNER FOR WEIGHING,”

DINI AR GEO
FRANCE sarl
Nogent-sur-Marne
info.fr@diniargeo.com

DINI AR GEO
GMBH
Sinsheim - Germany
info.de@diniargeo.com

DINI AR GEO
UK Ltd
Taunton - United Kingdom
info.uk@diniargeo.com

DINI AR GEO WEIGHING
INSTRUMENTS Ltd
Shanghai - China
info.cn@diniargeo.com

DINI AR GEO
WEIGHBRIDGES
Calto (RO) – Italy
info@diniargeo.com




HEAD OFFICE

Via Della Fisica, 20
41042 Spezzano di Fiorano Modena - Italy
Tel. +39.0536 843418 Fax. +39.0536 843521
info@diniargeo.com

SERVICE ASSISTANCE

Via Dell'Elettronica, 15
41042 Spezzano di Fiorano Modena - Italy
Tel. +39.0536 921784 Fax. +39.0536 926654
service@diniargeo.com

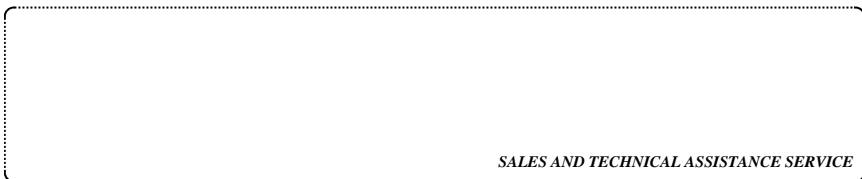

SALES AND TECHNICAL ASSISTANCE SERVICE

All the specifications and images can be subject to variations and upgrades without prior notice.